




Quick Start

The Mobile WiFi function descriptions and illustrations in this document are for your reference only. The product you have purchased may vary.

For detailed information about the functions and configurations of the Mobile WiFi, refer to the online help on the web management page. To access Mobile WiFi's web management page, use a connected device's browser and visit <http://192.168.8.1>. The default user name and password are both **admin**.

Appearance

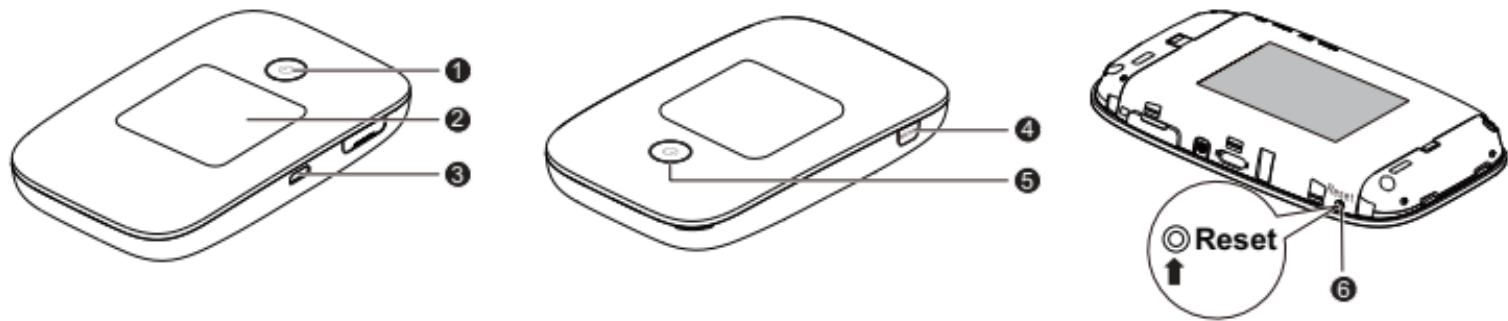

① Power indicator

② Screen

③ Micro USB port

④ MENU button

- Press the **MENU** button to display the menu.
- Press the **MENU** button to scroll down in menu.

⑤ Power button


- Press the  button to turn the Mobile WiFi on or off.
- Press the  button to confirm your selection in menu.

⑥ Reset button

Press and hold the **Reset** button to restore to factory values.

Installing

Install the micro-SIM card and microSD card(optional) according to the illustration.

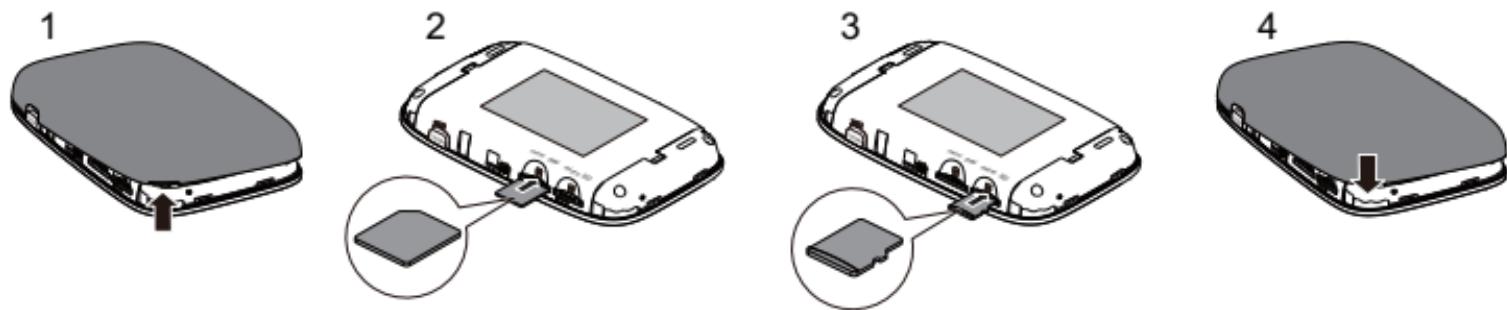


SSID and Wireless Network Encryption Key

When a Wi-Fi device establishes a connection to the Mobile WiFi for the first time, you may need to enter the default Service Set Identifier (SSID) and wireless network encryption key.

To view the current SSID and wireless network encryption key on the screen:

1. Press the **MENU** button to display the menu.
2. Press the **MENU** button to scroll to **Device Info**.

3. Press the  button to enter **Device Info**.

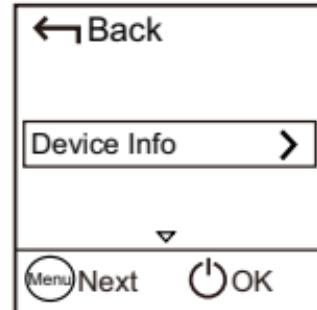

LTE is a trademark of ETSI.