Sunrise Smart TV.
The most important functions at a glance.

Search: For people who know what they're looking for.

Use the search function to search all of the programs for a specific term.

Color code navigation: Useful functions according to settings.

The functions of the colored buttons are shown on the screen. When you press the blue button, you are guided to the options menu, where you can adjust languages and subtitles, for example.

Sunrise TV Guide: Your electronic TV guide:

In a simple and concise format, you can see when and which programs are on – whether you are searching past, current or future shows.

Recordings: Switches to "Recordings" menu with existing and scheduled recordings, as well as series recordings.

Main menu: The button for everything.

The main menu brings you to the core of all functions of Sunrise TV.

Cloud Recording: More recording hours for your personal video library.

With this button you can record even more programs – and save them to our cloud storage space.

Back: Lets you go 10 seconds back in the program. Multiple clicks are cumulative allowing you to go back more than 10 seconds at a time.

Diagram might differ slightly from the device.

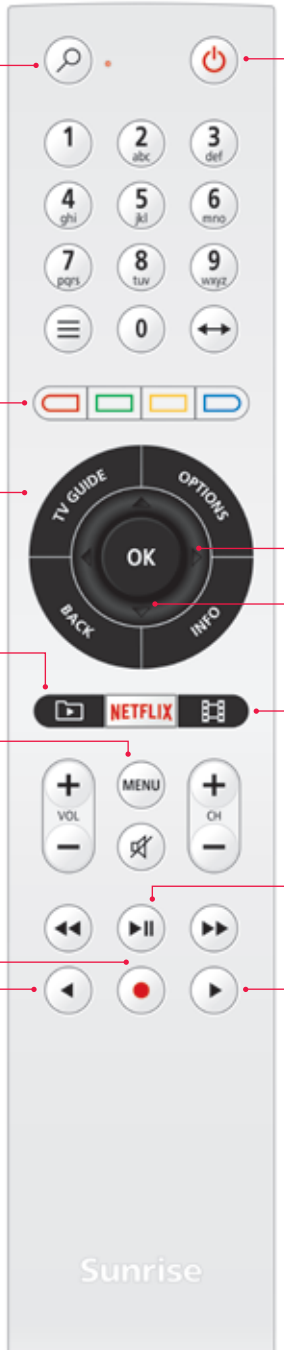

Power/Standby: Save electricity faster.

Press the button briefly to turn standby mode on or off. Hold down the button to turn the TV box on or off.

QuickZapper: What am I missing now?

Live TV shows you an overview of what is on other channels. Just press the arrow to the right.

Mini TV Guide: The most important information on the program you are watching.

While in Live TV, you see information about the program on the bottom of your screen when you press on the down arrow.

Video on Demand: Movie theater at the touch of a button.

In the VoD store, you have movies and TV series on your TV set at your fingertips.

Live Pause: Pause. Play. Rewind.

Simply pause the program you are watching for up to an hour with the "Playback/Pause" button.

Forward: Lets you skip 30 seconds ahead in the program. Multiple clicks are cumulative allowing you to skip ahead more than 30 seconds at a time.

For more detailed information about your remote control and Sunrise Smart TV, see: *sunrise.ch/en/tvsupport*